


TERRAPIN X

CONNECTING


your TERRAPIN X to a KESTREL with LiNK



 
Please make sure that
your KESTREL device
always has the latest
firmware version installed.

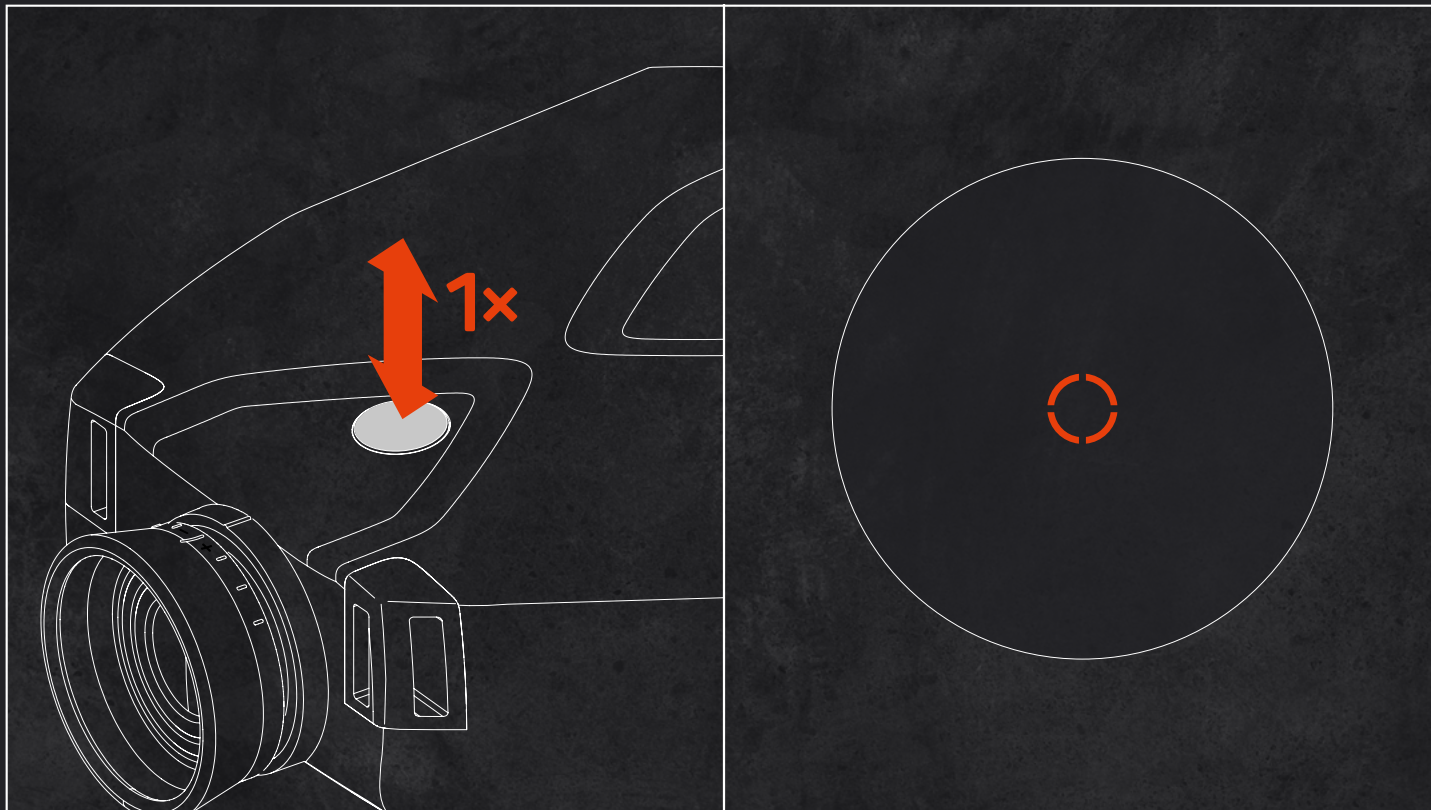


- By pressing and releasing the push button of your TERRAPIN X you turn on the device
- You will now see the digital aiming reticle in the display of your TERRAPIN X

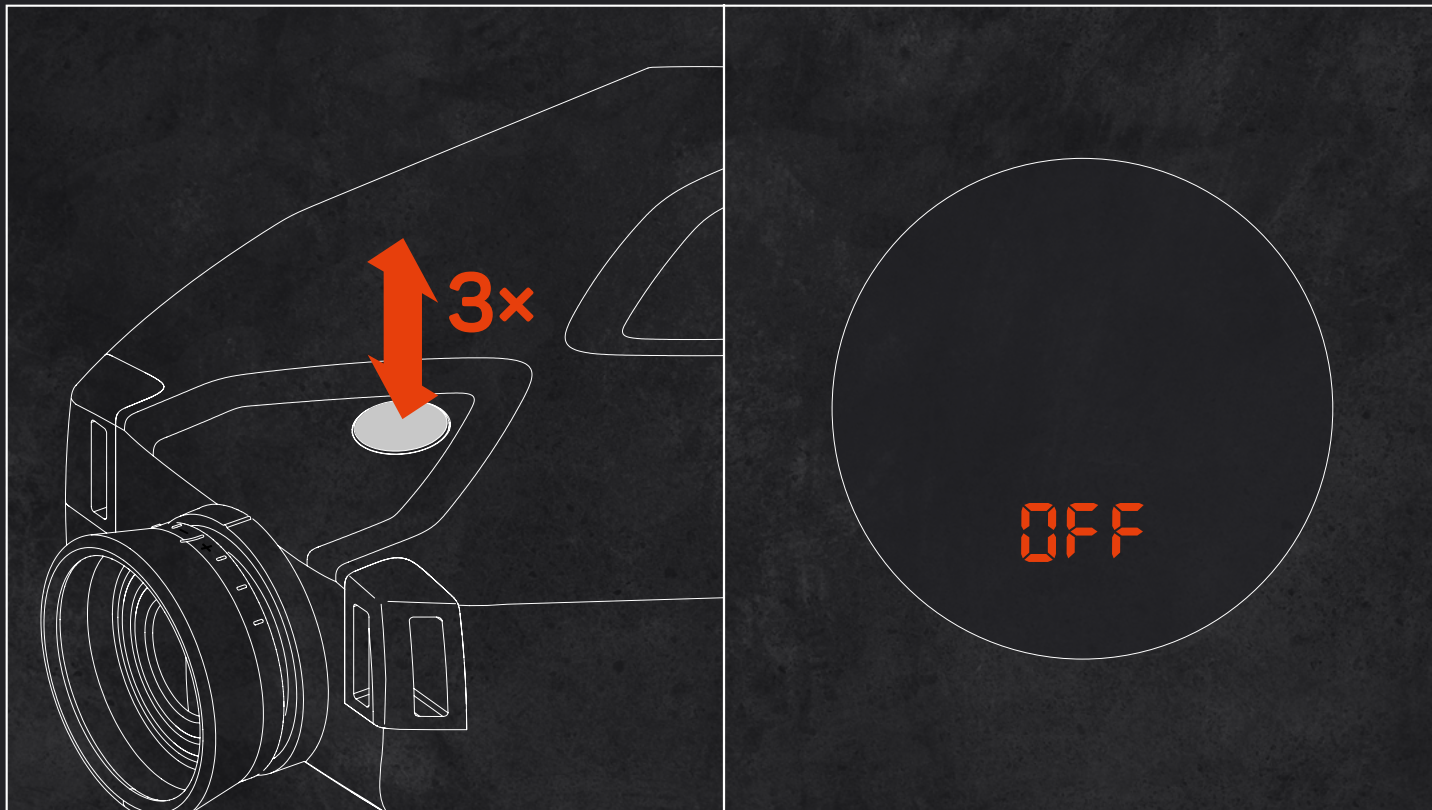

- Press and release the push button of your TERRAPIN X three times in quick succession to enter the Bluetooth menu
- In the display you will see the last saved setting. This can either be "OFF", "APP" or "fEST" (for KESTREL)

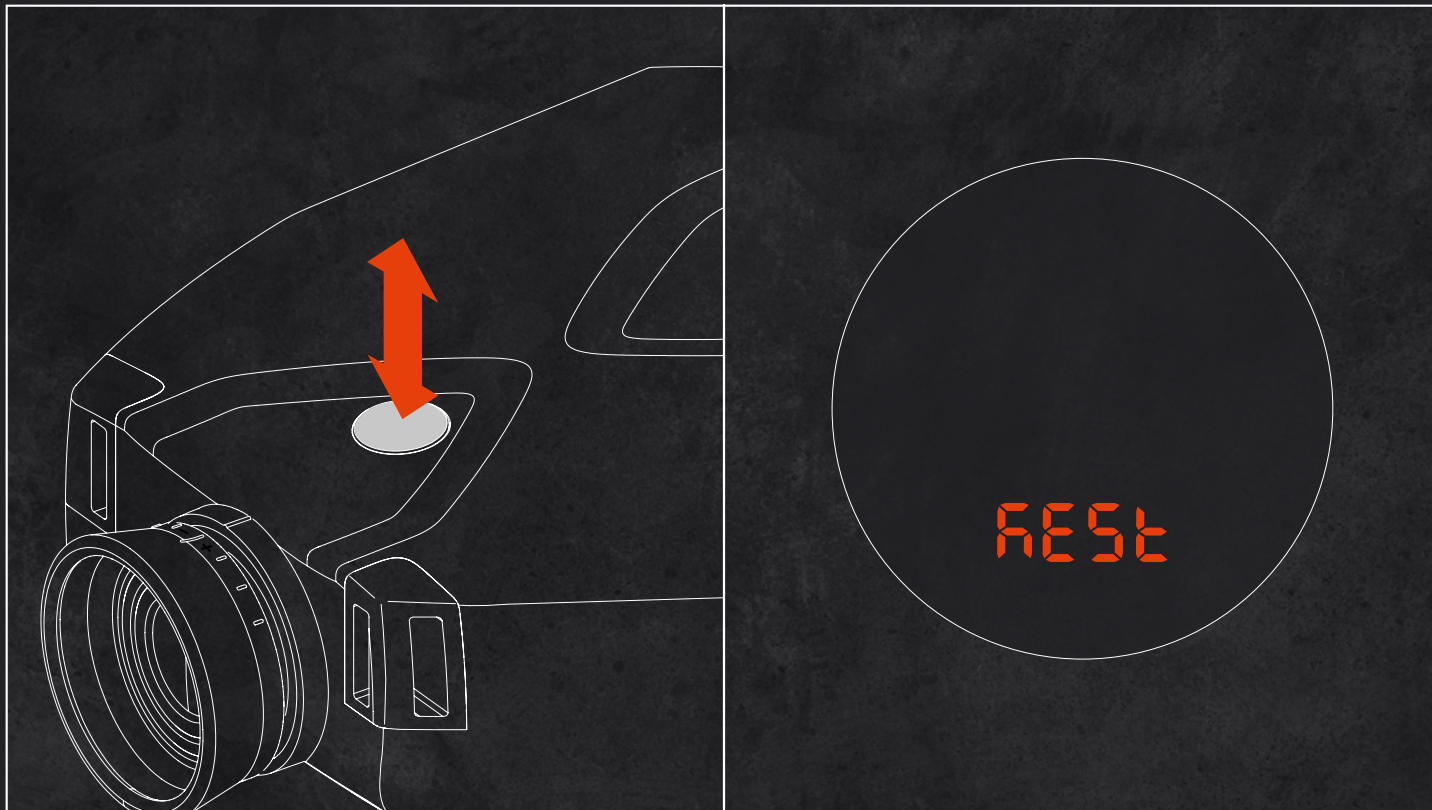

- Toggle through the options by pressing and releasing the push button of your TERRAPIN X until you reach “KESt”

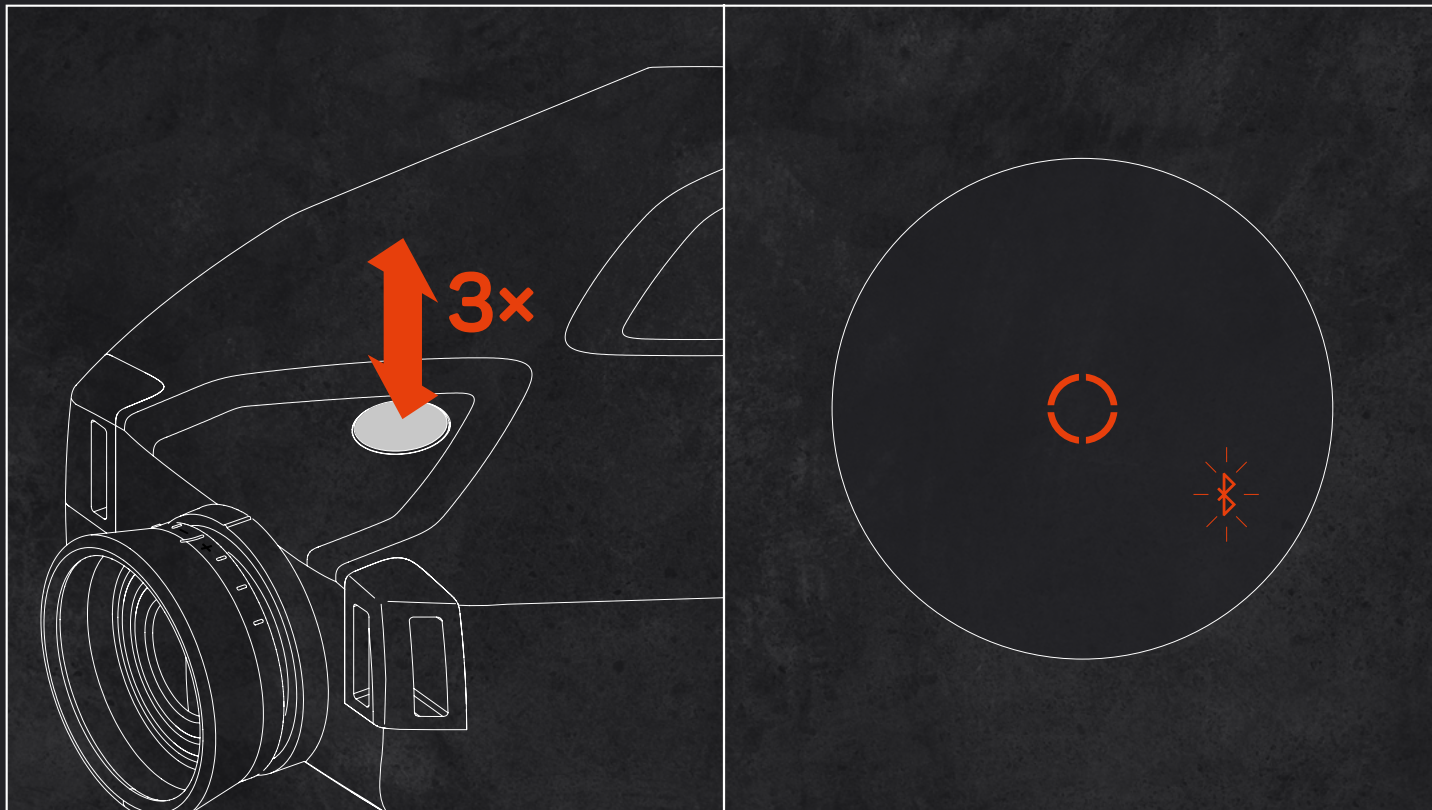


- Confirm this setting by pressing and releasing the push button three times in quick succession
- As confirmation four dashes ("----") will appear in the display of your TERRAPIN X
- Besides the electronic aiming reticle you will now also see a flashing Bluetooth symbol in the display of your TERRAPIN X. This signifies that the TERRAPIN X has entered the pairing mode



- Now turn on your KESTREL with LiNK
- Push the options button (symbolized by a “gear wheel”) on your KESTREL
- Select “Bluetooth” and then “Name New”
- The KESTREL will now search for a compatible device



 - When the KESTREL has found your TERRAPIN X select it and exit the menu by pushing the options button (symbolized by a “gear wheel”)
- Now turn “Lock” to “On” and save this setting by pushing the red button of your KESTREL
- Exit the Bluetooth menu by pushing the options button (symbolized by a “gear wheel”) twice

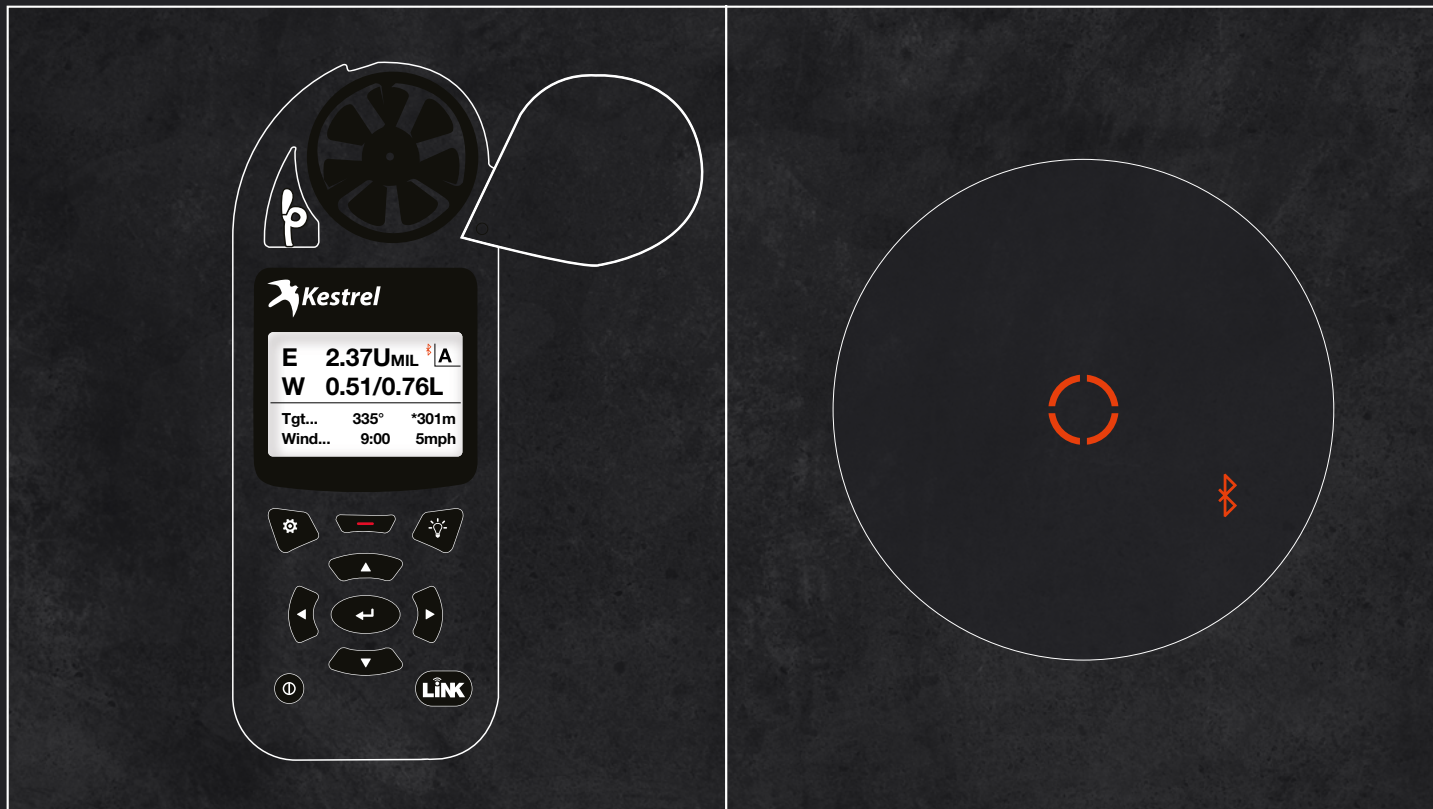

- You will now see a Bluetooth symbol in the KESTREL display signifying that it is connected with your TERRAPIN X
- In the display of your TERRAPIN X the Bluetooth symbol won't flash anymore but will now be displayed continuously

Your TERRAPIN X and KESTREL weather meter are now connected.

Please note:

After having saved the KESTREL setting in the Bluetooth menu of your TERRAPIN X and in case you have already established a connection before, the TERRAPIN X will, upon power up, re-establish the connection. This is indicated by a blinking BT symbol which turns steady once connection is established.

Please also note:

It may take up to 15 sec until a connection between the KESTREL with LiNK and your TERRAPIN X is established. During this period measurements might not be successfully transferred to .

VISIT US ON INSTAGRAM, YOUTUBE OR ON OUR WEBSITE

www.terrapin-x.com [#myTPNX](#)

