

TERRAPIN X



QUICK START GUIDE
SCHNELLSTARTANLEITUNG
GUIDE DE DEMARRAGE RAPIDE

1




Read User Manual


Benutzerhandbuch lesen

Lire le guide utilisateur


2a

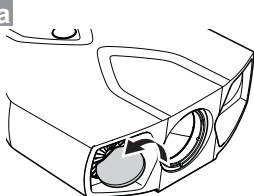


2b

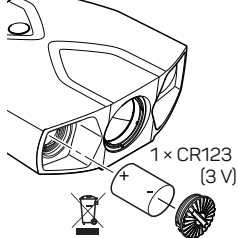


2c

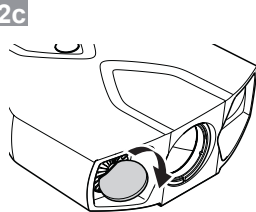


3a

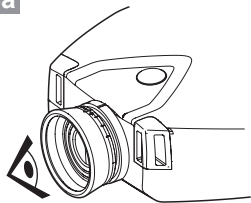


3b

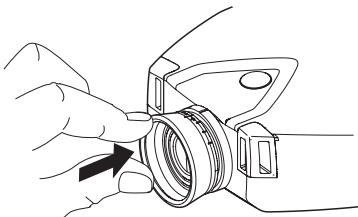


3c

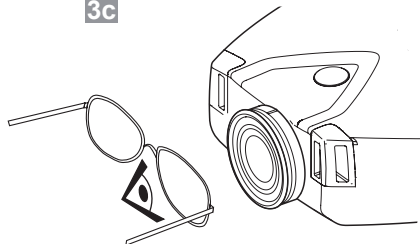


4a



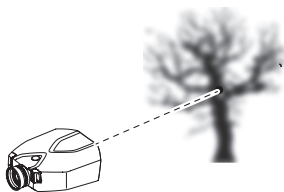


4b

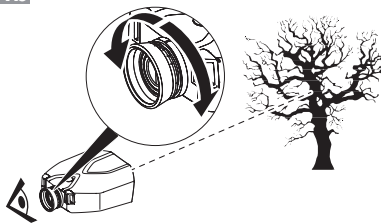

5

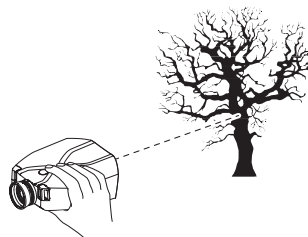

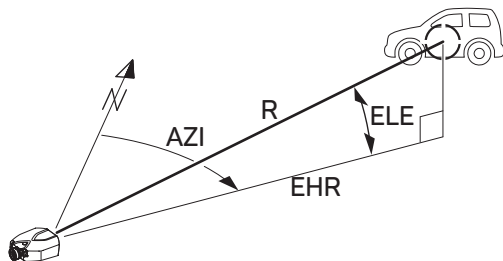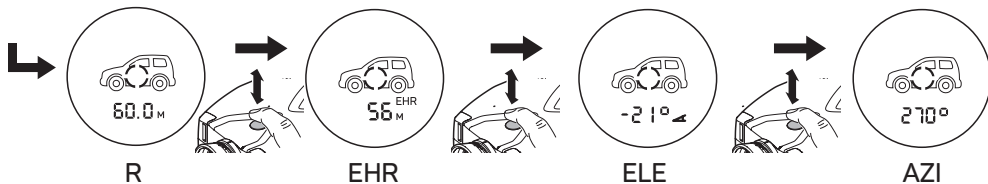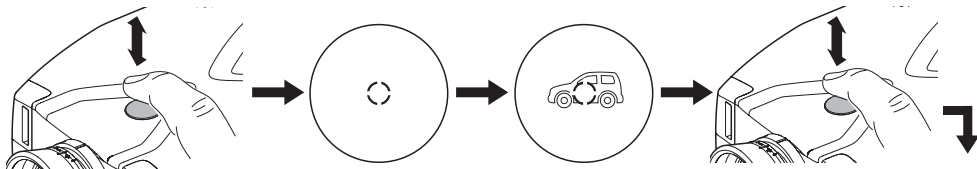

- R: Range (slope distance)
Entfernung (Schrägdistanz)
Distance (distance de la pente)
- EHR: Equivalent horizontal range
Äquivalente horizontale Entfernung
Distance horizontale équivalente
- ELE: Elevation angle
Neigungswinkel
Élévation angulaire
- AZI: Azimuth angle (direction)
Azimut
Azimut

Push button Auslösetaste Bouton-poussoir		Function Funktion Fonction
1x Click 1x Klick 1x Clic		Turn on the device / Complete measurement Gerät einschalten / Komplettmessung Allumer l'appareil / Mesure complète
Hold Gedrückt halten Maintenir	 > 2 s	Scan mode Scan-Modus Mode balayage
3x Click 3x Klick 3x Clic	 3x	Bluetooth menu Bluetooth Menü Menu Bluetooth
5x Click 5x Klick 5x Clic	 5x	Built-in-test Selbsttest Test intégré
6x Click 6x Klick 6x Clic	 6x	Setting the unit of measure / Default settings Einstellen der Messeinheit / Standardeinstellungen Réglage de l'unité de mesure / réglages par défaut

Notes / Notizen / Notes

www.terrapin-x.com

456-000.001-015
914834_A / 02.2018